

# Removing The Housing From Your Expobar Machine

---

## Introduction

This document will cover removing the housing from your Expobar Lever and Brewtus machine. In this writeup, I've used the Expobar Brewtus IV-R machine because it has the most amount of screws. Your machine will either have these same screws, or fewer.



### Tools:

Medium sized Phillips head screwdriver



All of the screws on these machines are easily accessed from the outside. Expobar has some of the easiest casings to remove of any machine brand. You can start removing screws from any part of the housing, as it is all one piece. There is not a particular way they need to come off. So I will just highlight where the screws are (see photos on next page):

---

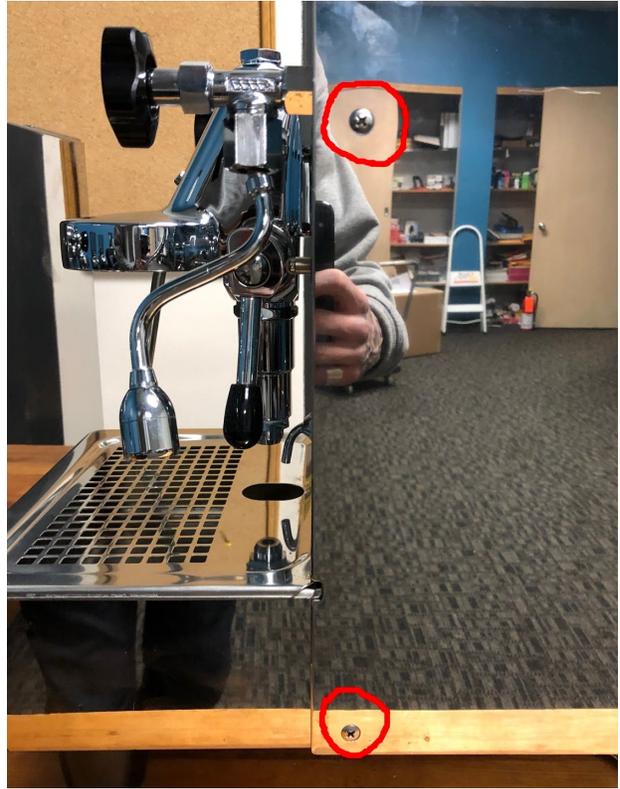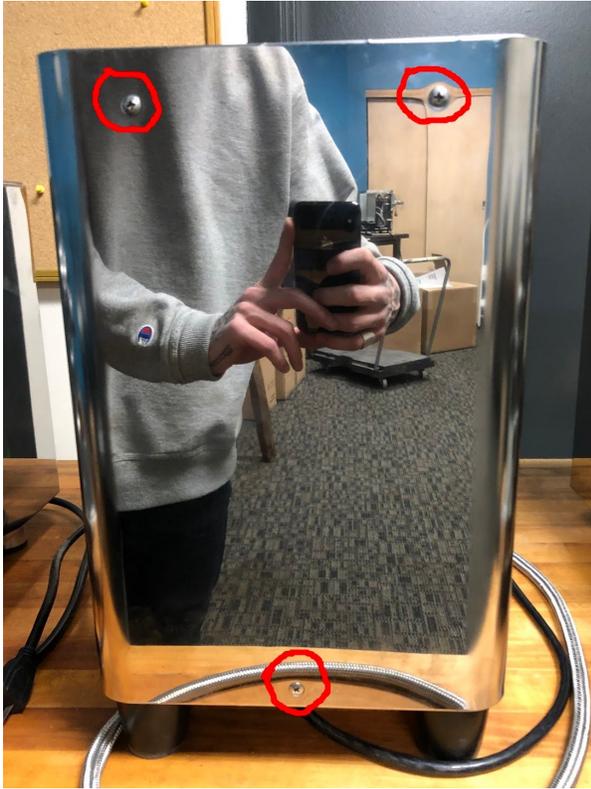

Once those have been removed, the whole housing should drop off as one assembly:



---

The machine that we used also has a top panel that can be removed. You may not need to remove this, depending on what you're going in to the machine for. It is attached by one screw on the top:



That should be all of the housing panels, and you should be looking at a fully opened machine:

