В	BARISTA MENU			<b>Û</b>	TECHNICIAN / SERVICE MENU  *CHANGES TO TECHNICIAN / SERVICE MENU ARE NOT RECOMMENDED*				
	Gradual Soft Pre-Infusion (GSP)  • ON / OFF			6	Settings Password Protected Password default: 1-1-1				
	Ramp up: 2 - 30 seconds			<u> </u>	Customize Machine Name				
U	Brew Temperature Settings				Eco Mode: ON / OFF				
	Adjust brew temp.			eco					
	(\$•§	Adjust steam boiler temp.							
eco	Eco Mode Settings				PID - Temp. Offset *CHANGES NOT RECOMMENDED*				
	есо	Idle time • Mad	er set chine enters low power state	<b>P</b>		Kp: <u>1.0</u> B: <u>2°C</u> / <u>4°F</u>	Kd: <u>2</u>		Ki: <u>0.01</u> CC / <u>16.2°F</u>
	ZZZZ		e standby set chine powers down		(F.Q	Kp: <u>4.0</u> B: <u>5°C</u> / <u>9°F</u>	Kd: <u>0</u>	.07	Ki: <u>2.2</u>
<u> </u>	Boiler ON / OFF Selection				Pressure Profile Settings				
		Brew Boiler on / off			NON-FUNCTION FOR CREM ONE INFUSER				
	& <b>.</b> Ø	Steam Boiler on / off			GSP Pump Voltage				
(F)	Time / Date Adjustments				Min Voltage: <u>12V</u> Max Voltage: <u>24V</u>				
	Auto ON / OFF settings			$\triangle$	Alert S	rt Settings			
<u>(</u> @)	<ul> <li>Function ON / OFF</li> <li>When ON, each day of the week can be set to a unique time frame</li> <li>Setting power switch to OFF will override.</li> </ul>				Ŕ	After (X) brew cycles, alert displayed • Default setting <b>0</b>			
					•	NON-FUNCTION FOR CREM ONE INFUSER			
	Shot Timer Screen Time  • The total shot length remains on screen for the selected time interval  • 0 - 30 seconds			° <b>£</b> •	Boiler Priority				
					Set Brew Boiler as priority				
					æ® ————————————————————————————————————	Set Steam Boiler priority: <b>Default</b>			
la <b>a</b> ll	Machine Counters				Water Source Selection				
	009	Machine Lifetime counters		l.,	✓ Use water reservoir				
		•	Total liters of water used		X	Plumbed waterline connection			
		coffee cup	Total shots pulled (min. 5sec)		D	NON-FUNCTION FOR CREM ONE INFUSER			
	$\triangle$	User set counters		1 1	Low Water Timeout				
		•	Liters since reset		<ul><li>Time machine will brew after low water</li><li>Default <u>15sec</u></li></ul>				
		Ŕ	Shots pulled since reset	0.1	Voltage to motor  • Default voltage 14V				
Û	Fahrenheit / Celsius selection				Higher voltages will increase machine noise  Steam Boiler Probe Sensitivity     Soft water may need increased sensitivity				
DMY	Date Format  • MM/DD/YY  • DD/MM/YY  • YY/MM/DD			لسا	Hard water may need decreased sensitivity				
				k#1	Installation Start-up  When engaged the Steam Boiler will fill. When the Steam Boiler is full, this icon will display  Believ the brown layer and allow water to flow for				
	LOGO NON-FUNCTION FOR CREM ONE INFUSER				<b>~</b> →	Upload / Download Machine Settings			
	Barista knob resolution     Adjustable from 0.2 - 0.5bar     Represent pressure change per knob click				NON-FUNCTION FOR CREM ONE INFUSER				
(·)				ίôς	Password settings  Change password from default 1-1-1				