

B	BARISTA MENU	T	TECHNICIAN / SERVICE MENU *CHANGES TO TECHNICIAN / SERVICE MENU ARE NOT RECOMMENDED*
	Gradual Soft Pre-Infusion (GSP) • ON / OFF • Ramp up: 2 - 30 seconds		Settings Password Protected • Password default: 1-1-1
	Brew Temperature Settings		Customize Machine Name
	Adjust brew temp.	eco	Eco Mode: ON / OFF
	Adjust steam boiler temp.		Set brew boiler temp after idle
eco	Eco Mode Settings		Set steam boiler temp after idle
eco	Idle timer set • Machine enters low power state	P	PID - Temp. Offset *CHANGES NOT RECOMMENDED*
	Post-idle standby set • Machine powers down		Kp: 1.0 Kd: 2.0 Ki: 0.01
	Boiler ON / OFF Selection		B: 2°C / 4°F E: 9.0°C / 16.2°F
	Brew Boiler on / off		Kp: 4.0 Kd: 0.07 Ki: 2.2
	Steam Boiler on / off		B: 5°C / 9°F
	Time / Date Adjustments		Pressure Profile Settings
	Auto ON / OFF settings • Function ON / OFF • When ON, each day of the week can be set to a unique time frame • Setting power switch to OFF will override.		Pressure profiling ENABLED
	Shot Timer Screen Time • The total shot length remains on screen for the selected time interval • 0 - 30 seconds		• Starting pressure: 1.5 - 5.0bar • Flow Meter: A / B
	Machine Counters		Pressure profiling disabled
	Machine Lifetime counters		GSP Pump Voltage
	Total liters of water used		• Min Voltage: 12V • Max Voltage: 24V
	Total shots pulled (min. 5sec)		Alert Settings
	User set counters		After (X) brew cycles, alert displayed • Default setting 0
	Liters since reset		After (X) liters, alert displayed • Default setting 0L
	Shots pulled since reset		Boiler Priority
	Fahrenheit / Celsius selection		Set Brew Boiler as priority
	Date Format • MM/DD/YY • DD/MM/YY • YY/MM/DD		Set Steam Boiler priority: Default
	USB port functionality		Water Source Selection
	LOGO Download alternative logos		NON-FUNCTION FOR CREM ONE PROFILER
	Export pressure profiles to USB		Low Water Timeout
	Import pressure profiles from USB • Warning: Importing profiles will overwrite all existing profiles		• Time machine will brew after low water • Default 15sec
	Barista knob resolution • Adjustable from 0.2 - 0.5bar • Represent pressure change per knob click		Voltage to motor
			• Default voltage 14V • Higher voltages will increase machine noise
			Steam Boiler Probe Sensitivity
			• Soft water may need increased sensitivity • Hard water may need decreased sensitivity
			Installation Start-up
			• When engaged the Steam Boiler will fill. When the Steam Boiler is full, this icon will display
			• Raise the brew lever and allow water to flow for at least 90sec
			Upload / Download Machine Settings
			Upload your settings to a USB
			Download new settings from a USB
			Password settings
			• Change password from default 1-1-1