

SINCE 1908

*Solis*

# GRIND & INFUSE PERFETTA

Type 1019

User manual







## ▲ CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	11
APPLIANCE DESCRIPTION	12
CONTROL BUTTONS	13
INSTALLATION	14
BEFORE FIRST USE (WATER FILTER CARTRIDGE)	14
MAKING AN ESPRESSO	15
TIPS FOR A PERFECT ESPRESSO	18
STEAMING MILK	19
USING THE HOT WATER FUNCTION	20
CHANGING THE ENERGY SAVING MODE	21
CHANGING THE BREWING TEMPERATURE	22
CHANGING THE WATER FILTER MODE (NO FILTER)	22
CHANGING THE AMOUNT OF COFFEE	22
STORAGE	23
DAILY MAINTENANCE	23
WEEKLY MAINTENANCE	23
MONTHLY MAINTENANCE	24
REPLACING THE WATER FILTER CARTRIDGE	27
USING THE BREWING HEAD CLEANING CYCLE	29
DESCALING	31
CLEANING A BLOCKED GRINDER	34
RESETTING FUNCTIONS	34
TECHNICAL SPECIFICATIONS	35
TROUBLESHOOTING	35
ALARMS	39
DISPOSAL	40

## ▲ INTENDED USE

- This appliance is intended to prepare various types of coffee with freshly ground beans.
- Only use the appliance as described in this manual.
- This appliance is intended for household use and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments and not for commercial use
- This appliance is intended for indoor use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

## ▲ IMPORTANT SAFETY PRECAUTIONS

Symbol	Meaning
	Indicates a hazardous situation that, if not avoided, will result in death or serious injury.
	Indicates a hazardous situation that, if not avoided, could result in death or serious injury.
	Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.
	Indicates a situation that, if not avoided, could result in damage to the product or to the environment.

## GENERAL SAFETY INSTRUCTIONS

### WARNING

**Risk of injury.** Using this appliance without knowledge of the involved risks may cause injury to yourself or others.

- Ensure you have fully read and understood the instructions in this user manual before installing or using the appliance.
- Keep this document for future reference.

## SAFETY INSTRUCTIONS REGARDING INSTALLATION

### **⚠ WARNING**

**Risk of fire or electric shock.** Using the appliance with a damaged power cable may cause electric shock or fire caused by short circuit of electrical components.

- Do not use the appliance if the power cable is damaged.
- If the power cable is damaged, it must be replaced by the manufacturer, the service agent or similar qualified personnel in order to avoid a hazard.
- Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Fully unwind the power cable before use.
- Do not disconnect the appliance by pulling on the cable. Always grasp the connector and pull.

### **⚠ WARNING**

**Risk of electric shock.** Touching the appliance while in contact with water greatly increases the chance of electric shock.

- Never place the appliance in such a way that it is at risk of falling into water or coming into contact with water or other liquids (e.g. in or near a sink).
- Never reach for an appliance that has fallen into water or other liquids.
  - Always wear dry rubber gloves to unplug the appliance before taking it out of the water.
  - Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.

- Do not operate the appliance with wet hands.

**⚠ WARNING**

**Risk of electric shock.** Heat or water originating from the appliance may damage the power outlet.

- Do not place the appliance directly under a power outlet.

**NOTICE**

**Risk of overheating.** Blockage of the ventilation openings or exposure to a heat source may cause the appliance to overheat.

- Keep a minimum distance of 20 cm between the appliance and walls, curtains or other materials and objects so the air around the appliance can circulate freely.
- Do not place the appliance inside a cabinet when in use.
- Do not place the appliance in direct sunlight.

**NOTICE**

**Risk of product damage.** Physical shock may damage the internal components of the appliance.

- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down.
- Place the appliance on a stable, flat, heat and moisture resistant surface.

**NOTICE**

**Risk of damage to the electrical components.** Connecting the appliance to an unsuitable power supply may cause damage to the electrical components.

- Before using the appliance, check that the voltage stated on the type plate of your appliance matches your mains voltage.
- Do not operate the appliance with a multiway plug adapter.

## SAFETY INSTRUCTIONS REGARDING USE

### **⚠WARNING**

**Risk of injury.** Leaving the appliance unattended during use may cause injury to children or people that are not aware of the risks involved with the appliance.

- Do not leave the appliance unattended when in use.
- Switch off and unplug the appliance when not in use.
- Do not use a timer or a separate remote-control system that automatically switches the device on.
- Children must be supervised to ensure that they do not play with the appliance.

### **⚠CAUTION**

**Risk of electric shock or product damage.** The power cable may be damaged when moving the appliance during use:

- Do not move the appliance when in use.
- Switch off and unplug the appliance before moving the appliance.

### **⚠CAUTION**

**Risk of contamination.** Hot water is more likely to contain contaminants, such as corrosion from metallic pipes or boilers.

- Only use cold tap water in the water tank.

### **⚠CAUTION**

**Risk of burn injury.** Parts of the appliance become hot during use.

- During operation, only touch the buttons, selectors, or heat insulated handles. All other parts can get hot.
- Never remove the portafilter during the brewing process.

- Be careful when emptying the portafilter directly after use. The appliance and the coffee dregs are still very hot.
- During or directly after the steaming process, only touch the steam and hot water wand by using the thermo-insulated loop. The steaming wand gets hot.
- Do not point the tip of the steaming wand directly at the bottom of the cup.
- Never point the steam and hot water wand towards people, animals, or moisture sensitive items.

**NOTICE**

**Risk of product damage.** Physical shock may damage the internal components of the appliance.

- Only lift the appliance by holding the base.
- Do not drop the appliance and avoid impacts.

**NOTICE**

**Risk of product damage.** The use of damaged parts or incorrect accessories may permanently damage the appliance.

- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- Only use the appliance with the provided accessories or accessories recommended by Solis.

**NOTICE**

**Risk of overheating.** Blockage of the ventilation openings or exposure to a heat source may cause the appliance to overheat.

- Do not cover the air vents when the appliance is in use.

**NOTICE**

**Risk of product damage.** Incorrect use of the portafilter may damage it.

- Do not overfill the portafilter. The ground coffee should not be in direct contact with the brewing head when placed to ensure a proper seal.
- Make sure the portafilter is firmly installed. If the portafilter does not turn easily in place, remove the portafilter and reduce the amount of ground coffee.

**NOTICE**

**Risk of product damage.** Cutting off the power while the appliance is in use may cause damage to active electrical components.

- Always switch off the appliance before disconnecting.

**NOTICE**

**Risk of water damage.** Water may spill out of the water tank when it is too full and damage the internal electrical components.

- Do not fill the water tank above the *MAX* marking.

**NOTICE**

**Risk of product damage.** Using the appliance without water in the tank may cause damage to the internal components.

- Do not operate the appliance when the water tank is empty.



**NOTICE**

**Risk of product damage.** Incorrect use of the appliance may damage the grinder.

- Do not use the appliance when the bean container is empty.
- Only fill the bean container with whole coffee beans. Never use ground coffee.
- Only adjust the grind size when the grinder is running, to avoid damaging the grinder.
- Do not activate the grinder when the lid of the bean container is removed.

**NOTICE**

**Risk of product damage.** Objects placed on the appliance may be damaged or fall off.

- Do not place anything on the appliance while it is in use, except for cups for preheating.

**SAFETY INSTRUCTIONS REGARDING MAINTENANCE****⚠ DANGER**

**Risk of choking.** The cleaning tool is small and may be swallowed by children.

- Keep the cleaning tool away from children.

**⚠ WARNING**

**Risk of electric shock.** Touching live electrical components will cause electric shock.

- Disconnect the appliance from the power source before performing maintenance tasks and when replacing parts.

**⚠ WARNING**

**Risk of poisoning.** Oils or lubricants used in the appliance may seep into the water tank and pollute the water.

- Do not use any oils or lubricants on this appliance.

**⚠ CAUTION**

**Risk of burn injury.** Parts of the appliance become hot during use.

- Let the appliance cool down before performing maintenance.

**NOTICE**

**Risk of corrosion damage.** Abrasive chemical cleaning agents such as ammonia, acid or acetone may cause acid corrosion damage to the appliance.

- Only use non-abrasive cleaning agents to clean the appliance.

**NOTICE**

**Risk of water damage.** Internal electrical components will be damaged when they come into contact with water.

- Never immerse the appliance in water or place it in a dishwasher.

**NOTICE**

**Risk of product damage.** The appliance must be descaled periodically to prevent permanent damage to the internal components.

- When the descaling alarm is displayed, descale the appliance immediately to avoid permanent damage to the appliance. Damage related to limescale is not covered by the warranty if the descaling procedure is not performed regularly as described in this section.

**NOTICE**

**Risk of product damage.** Spilled descaling solution may cause damage to the surface of the appliance. Wipe off spilled descaling solution immediately.

**SAFETY INSTRUCTIONS REGARDING STORAGE****NOTICE**

**Risk of product damage.** Exposure to hot or cold temperatures may cause damage to the internal components of the appliance.

- Do not store the appliance at temperatures below 32 °F or above 131 °F.

**▲ CONTENTS**

Please check the contents of the package:

---

**1x** GRIND & INFUSE PERFETTA

---

**1x** Portafilter

---

**1x** Tamper

---

**1x** Milk jug

---

**1x** Cleaning brush

---

**1x** Rubber insert for cleaning

---

**2x** Filters

---

**1x** Water filter


---

**1x** Test strip

---


## ▲ APPLIANCE DESCRIPTION

The GRIND & INFUSE PERFETTA is an espresso machine for preparing espresso with freshly ground coffee beans. The appliance is equipped with a steaming wand to make steamed milk or heat beverages. With the GRIND & INFUSE PERFETTA you can serve yourself and your guests the perfect espresso, cappuccino and much more!

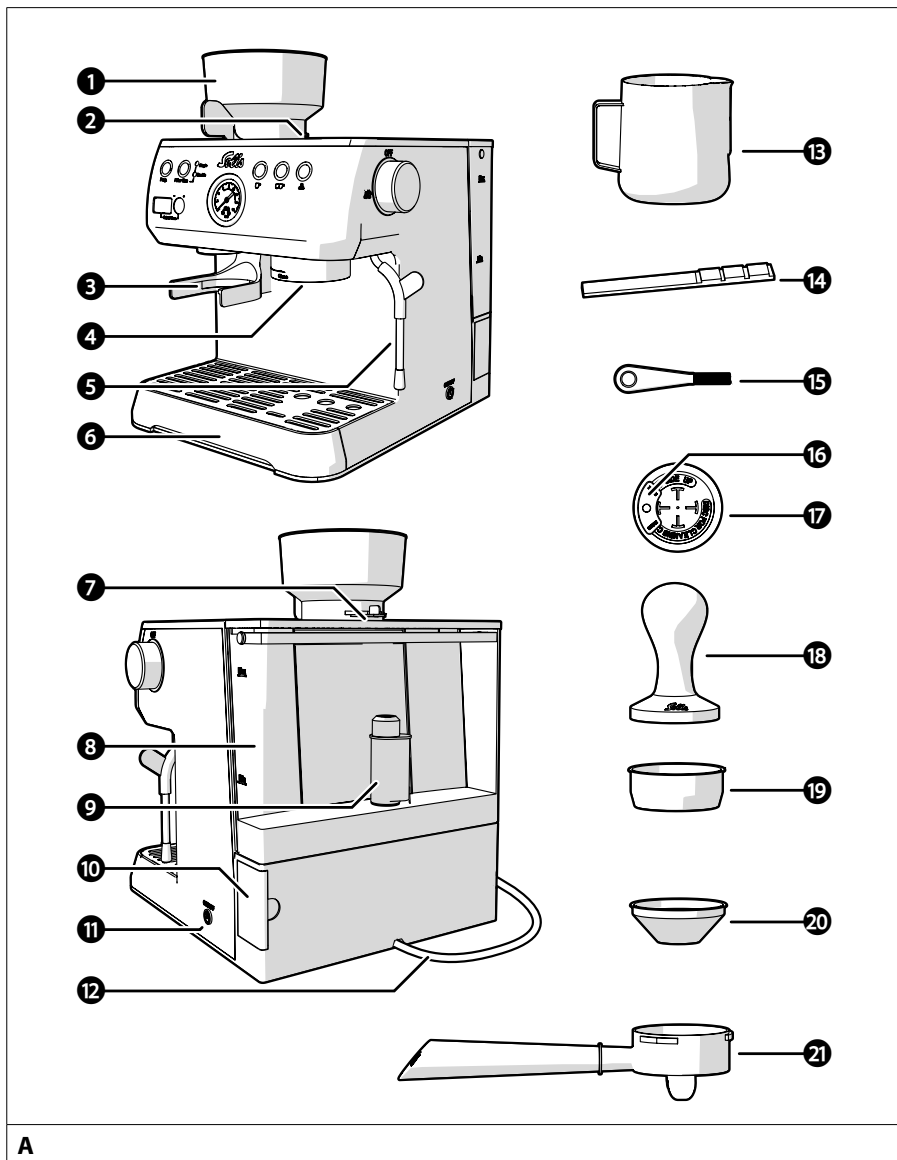

- |                          |                               |
|--------------------------|-------------------------------|
| 1 Bean container         | 12 Power cable                |
| 2 Cup tray               | 13 Milk jug                   |
| 3 Portafilter holder     | 14 Test strip                 |
| 4 Brewing head           | 15 Cleaning brush             |
| 5 Steaming wand          | 16 Cleaning tool              |
| 6 Drip tray              | 17 Rubber insert for cleaning |
| 7 Grinder unlock button  | 18 Tamper                     |
| 8 Water tank             | 19 Double cup filter          |
| 9 Water filter cartridge | 20 Single cup filter          |
| 10 Accessories storage   | 21 Portafilter                |
| 11 Power button          |                               |

## ▲ CONTROL BUTTONS

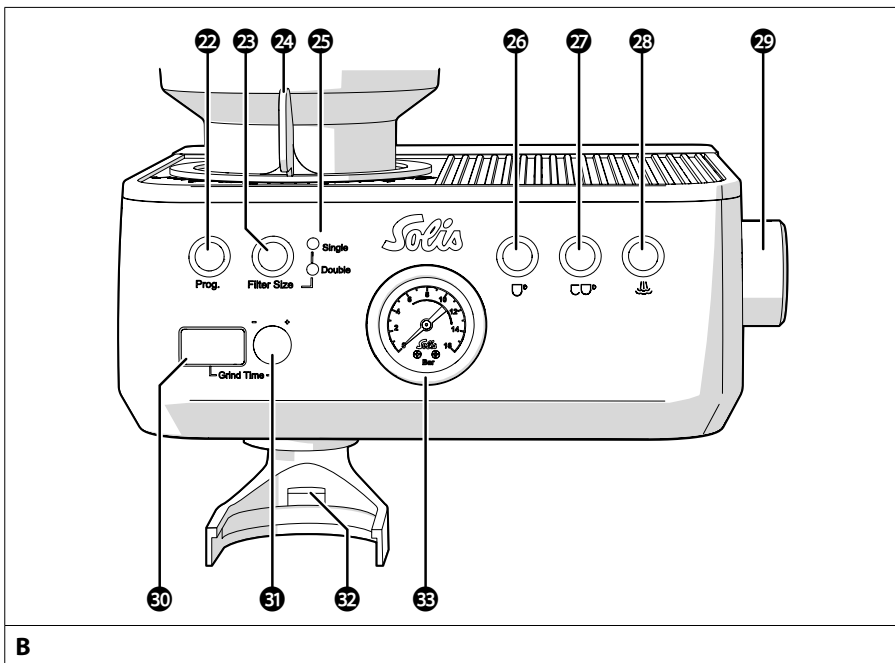

- |                                 |                             |
|---------------------------------|-----------------------------|
| 22 Programming button           | 28 Steaming function button |
| 23 Filter size selection button | 29 Steaming knob            |
| 24 Grind size selector          | 30 Display                  |
| 25 Filter size indicator        | 31 Grind time knob          |
| 26 Single cup extraction button | 32 Portafilter button       |
| 27 Double cup extraction button | 33 Manometer                |

## ▲ INSTALLATION

To install the appliance:

1. Place the appliance on a stable, flat, and heat and moisture resistant surface.
2. Place the **bean container** ① on the appliance. Rotate until the bean container locks in place.
3. Plug the **power cable** ⑫ into a power outlet.
4. Press the **power button** ⑪ to switch on the appliance.

The appliance is ready for use when the **cup extraction buttons** ⑳ ㉑ continuously light up white.

## ▲ BEFORE FIRST USE (WATER FILTER CARTRIDGE)

Before first use, clean the appliance as described in section *Daily maintenance*.

- ❗ If you don't want to use a water filter, you can leave the appliance on default settings. You can skip the following steps in this section.

To place and configure the water filter:

1. Hold the **test strip** ⑭ briefly in a glass of tap water.
2. Read the measured water quality on the **test strip** ⑭.
3. Rotate the selector at the bottom of the **water filter cartridge** ⑨ to the optimal position.

---

<b>Position A</b>	For use with soft water.
<b>Position B</b>	For use with medium hard water.
<b>Position C</b>	For use with hard water.

---

4. Hold the **water filter cartridge** ⑨ in a container with water.
5. Gently squeeze the **water filter cartridge** ⑨ to remove air bubbles from the filter.
6. Insert the **water filter cartridge** ⑨ into the bracket in the **water tank** ⑧ with the selector facing downwards.
7. Fill the **water tank** ⑧ with water up to the *MAX* marking.
8. Press the **programming button** ㉒ to enter the settings menu.
9. Press the **steaming function button** ㉘ to enter the filter settings.
10. Press the **single cup extraction button** ㉖ to set the filter setting to *YES*.
11. Place a container (min. 0.14 gal) underneath the **brewing head** ④.
12. Press the **programming button** ㉒ to exit the settings menu. The rinsing process starts automatically.

## ▲ MAKING AN ESPRESSO

To make an espresso with freshly ground coffee:

1. Choose if you want to make one or two espressos.
2. Place empty cups on the **cup tray** ② to preheat the cups.
3. Check if the water level in the water tank is between the *MIN* and *MAX* indicators.
4. If not, fill the water tank up to the *MAX* indicator.

**i** Refresh the water at least once a day.

5. Fill the **bean container** ① with whole coffee beans (max. 0.55 lb).
6. Close the **bean container** ① with the lid.
7. Make sure the hopper gate at the back of the **bean container** ① is open.
8. Place the corresponding **cup filter** ⑱ ⑲ in the **portafilter** ⑳.

**i** When the appliance was not used recently, we recommend rinsing the appliance and the portafilter (section *Daily maintenance*).

9. Press the **filter size selection button** ㉓ to switch to the corresponding filter size.
10. If needed, adjust the grind size with the **grind size selector** ㉔ (see section *Tips for a perfect espresso*).
11. Place the **portafilter** ㉑ into the **portafilter holder** ③.
12. Rotate the **grind time knob** ㉙ to adjust the grinding time. The grind time is shown on the **display** ㉚.

**i** The maximum grind time is 30 seconds. To save the grinding time for the selected filter size, press and hold the filter size button. The filter size button blinks and the appliance beeps twice when the setting is saved.

13. Press the **grind time knob** ㉙ or the **portafilter button** ㉛ to start the grinding process. The display shows the remaining grind time.

**i** If you need to stop the process before it is finished, press the grind time knob or portafilter button again.

**i** If you need to resume the grinding process, press the grind time knob or portafilter button again within 20 seconds.

**i** To grind without using the grind time presets, you can also press and hold the grind time knob or the portafilter button. The grinder starts grinding and stops upon releasing the grind time knob.

14. Shake the **portafilter** ㉑ and pull it out of the **portafilter holder** ③.
15. Gently tap the **portafilter** ㉑ against the counter to evenly distribute the ground coffee.

16. Tamp the ground coffee with the **tamper** 18.


**NOTICE**

**Risk of product damage.** Incorrect use of the portafilter may damage it.

- Do not overfill the portafilter. The ground coffee should not be in direct contact with the brewing head when placed to ensure a proper seal.

17. Remove any ground coffee from the edge of the **portafilter** 21.

18. Pull the **steaming wand** 5 to the side.

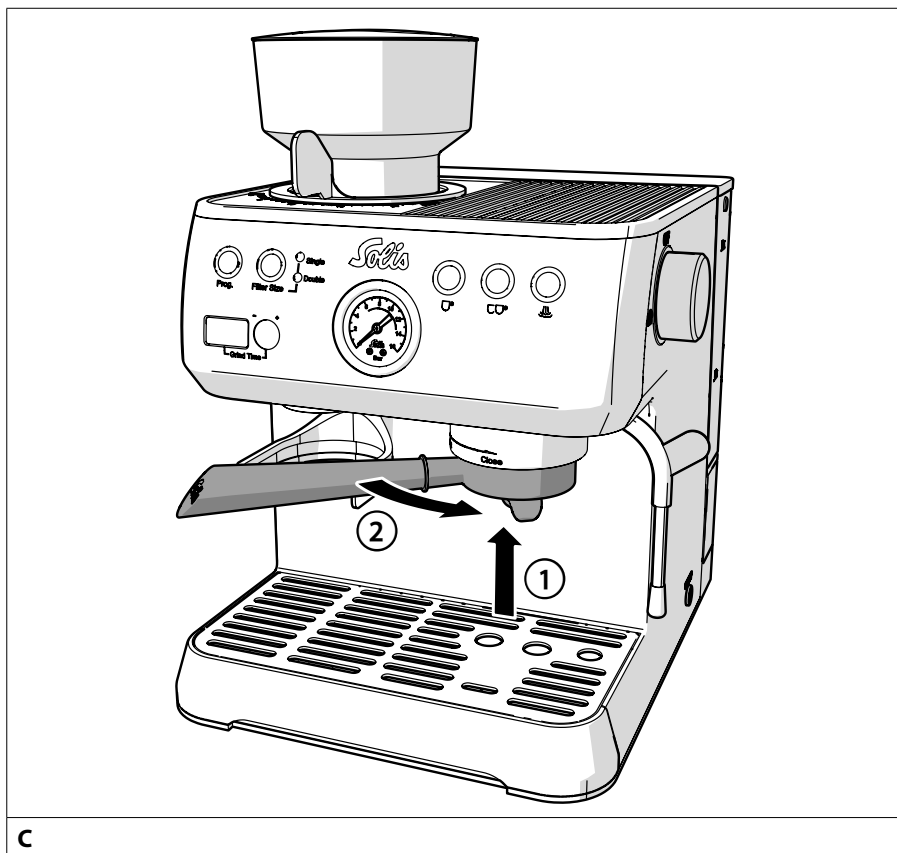

19. Insert and rotate the **portafilter** 21 into the **brewing head** 4 (see image C). Make sure the handle is aligned with the *CLOSE* marking.



## NOTICE

**Risk of product damage.** Incorrect use of the portafilter may damage it.

- Make sure the portafilter is firmly installed. If the portafilter does not turn easily in place, remove the portafilter and reduce the amount of ground coffee.
20. Place one or two cups from the **cup tray** 2 underneath the spouts of the portafilter.

When the **cup extraction buttons** 26 27 light up you can start the brewing process.

## ⚠ WARNING

**Risk of injury.** Leaving the appliance unattended during use may cause injury to children or people that are not aware of the risks involved with the appliance.

- Do not leave the appliance unattended when in use.
- i To program the amount of coffee, refer to section *Changing the amount of coffee*.
21. Press the corresponding **cup extraction button** 26 27 to start the process.
- i During the coffee extraction, the display shows the brewing time.
22. Check during the process if the **manometer** 33 goes from 0 to the optimal range (8 – 12 bar).
- i Quickly double press the cup extraction button to skip pre-infusion and start immediately with the coffee extraction.
- i If you need to stop the process before it is finished, press the corresponding cup extraction button again. The maximum brewing time is 60 seconds.

**CAUTION**

**Risk of burn injury.** Parts of the appliance become hot during use.

- Be careful when emptying the portafilter directly after use. The appliance and the coffee dregs are still very hot.
- Never remove the portafilter during the brewing process.

23. Remove the **portafilter** 21 from the **brewing head** 4.

24. Empty the **cup filter** 19 20 in a knock box or a bin.

To prepare another espresso, repeat the steps in this section. When you are finished we recommend cleaning the appliance (section *Daily maintenance*).

**TIPS FOR A PERFECT ESPRESSO**

The taste of an espresso is influenced by the following factors:

- Coffee type
- Grind size
- Amount of ground coffee
- Tamping pressure
- Brewing time
- Brewing pressure

Consult the table below for how to use different settings for a different taste.

Espresso properties	Stronger, bitter, and smaller espresso	Weak, less bitter, and bigger espresso
Grind size	Finer grind size	Coarser grind size
Amount	More ground coffee	Less ground coffee
Tamping pressure	More firm	More gently
Brewing time	Longer	Shorter

**i** The manometer must always indicate 6 – 13 bar during the extraction. When the pressure is too low during the process, try making a stronger espresso and vice versa.

**i** To ensure a good espresso, the appliance, the portafilter, and the used cups must be preheated.

We recommend starting with these settings, and make small changes to taste:

	1 cup	2 cups
Grind size	12	12
Amount	0.018 - 0.020 lb	0.035 - 0.040 lb
Brewing time	15 – 25 s	25 – 35 s

## ▲ STEAMING MILK

### ⚠ CAUTION

**Risk of burn injury.** Parts of the appliance become hot during use.

- During or directly after the steaming process, only touch the steam and hot water wand by using the thermo-insulated loop. The steaming wand gets hot.
- Do not point the tip of the steaming wand directly at the bottom of the cup.
- Never point the steam and hot water wand towards people, animals, or moisture sensitive items.

**i** You can use steamed milk for example in a cappuccino or a caffè latte.

**i** You can also use the steaming function for heating chocolate milk or other beverages.

To steam milk:

1. Press the **steaming function button** **28** to activate the steaming function.

The appliance heats up the steaming function. The **steaming function button** **28** blinks. When the steaming function is ready, the **steaming function button** **28** continuously lights up white.

2. Fill the **milk jug** **13** with milk (max. half a jug).

- i** If the steaming wand is used for dispensing hot water, the steaming wand dispenses water residue before the steaming function activates. For good steamed milk, first dispense the residue before putting the steaming wand into the milk.
- 3. Check if the **steaming function button** **28** constantly lights up white.
- 4. Lower the nozzle of the **steaming wand** **5** a few millimeters into the milk.
- 5. Rotate the **steaming knob** **29** counterclockwise to switch on the **steaming wand** **5**.
- 6. Wait until the milk is steamed as desired.
- i** When you cannot touch the side of the milk jug for longer than 3 seconds, the temperature is optimal (approximately 149 °F).
- 7. Rotate the **steaming knob** **29** clockwise to switch off the **steaming wand** **5**.
- i** When not switched off, the steaming function automatically switches off after 2 minutes.
- 8. Clean the nozzle of the **steaming wand** **5** with a damp cloth.
- 9. Rotate the **steaming knob** **29** to remove all milk from the **steaming wand** **5**.
- 10. Press one of the **cup extraction buttons** **26** **27** to cool down the steaming function.

The **cup extraction buttons** **26** **27** start flashing. When the **cup extraction buttons** **26** **27** constantly light up white, the system is ready for making coffee.

- 11. Pour the frothed milk directly into an espresso.
- 12. Clean the **milk jug** **13** with water or in a dishwasher after use.

## ▲ USING THE HOT WATER FUNCTION

### ▲ CAUTION

**Risk of burn injury.** Parts of the appliance become hot during use.

- During or directly after the steaming process, only touch the steam and hot water wand by using the thermo-insulated loop. The steaming wand gets hot.
- Do not point the tip of the steaming wand directly at the bottom of the cup.
- Never point the steam and hot water wand towards people, animals, or moisture sensitive items.

To use the hot water function:

1. Lower the **steaming wand** 5 into a cup.
2. Rotate the **steaming knob** 29 anticlockwise to dispense hot water from the **steaming wand** 5.
3. Press the **steaming function button** 28 to boost the hot water function.
4. Rotate the **steaming knob** 28 clockwise to stop the hot water function.

**i** When not switched off, the hot water function automatically switches off after 2 minutes.


**i** You can also use the hot water function to preheat the cups.

## ▲ CHANGING THE ENERGY SAVING MODE

To save energy the appliance goes into standby mode after a period of inactivity (10 minutes by default). After 20 minutes of standby mode the appliance switches off automatically.

To set the period of inactivity before standby:

1. Press the **programming button** 22 to enter the settings menu.
2. Press the **double cup extraction button** 27 to enter the inactivity time setting.
3. Rotate the **grind time knob** 31 to change the inactivity time.
4. Press the **programming button** 22 to confirm the new value and exit the settings menu.

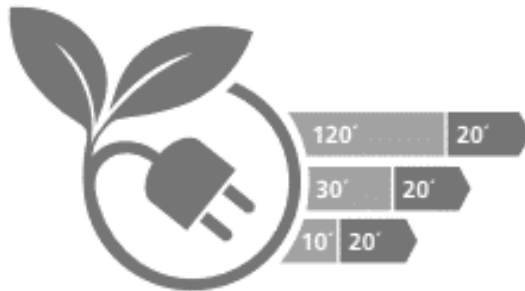

**D**

**i** 20 minutes after the energy saving mode time, the machine will shut down (image D).

When the cup extraction buttons light up white, the appliance is ready for use.

## ▲ CHANGING THE BREWING TEMPERATURE

To set the brewing temperature:

1. Press the **programming button** 22 to enter the settings menu.
2. Press the **single cup extraction button** 26. The display shows the current brewing value.
3. Rotate the **grind time knob** 31 to change the brewing temperature. A positive number means a higher brewing temperature, a negative number means a lower brewing temperature.
4. Press the **programming button** 22 to confirm and save the new value.

When the appliance beeps twice and the cup extraction buttons light up white, the appliance is ready for use.

## ▲ CHANGING THE WATER FILTER MODE (NO FILTER)

When using the appliance without a water filter, change the water filter mode and the set water hardness:

1. Press the **programming button** 22 to enter the settings menu.
2. Press the **steaming function button** 28 to enter the water filter setting.
3. Press the **double cup extraction button** 27 to set the water filter setting to *NO*.
4. Press the **programming button** 22 to confirm the setting and to enter the water hardness menu.
5. Rotate the **grind time knob** 31 to change the water hardness setting (see section *Alarms*).
6. Press the **programming button** 22 to confirm and save the new value.

When the appliance beeps twice and the cup extraction buttons light up white, the appliance is ready for use.

## ▲ CHANGING THE AMOUNT OF COFFEE

- i** To follow the instructions in this section correctly, start with the steps in section *Making an espresso*. Do not perform these steps on its own.

To change the amount of coffee that is dispensed:

1. Press and hold one of the **cup extraction buttons** 26 27. The **programming button** 22 starts flashing and coffee is dispensed.
2. When the desired amount of coffee is dispensed, release the pressed **cup extraction button** 26 27 to stop dispensing coffee.
3. Press the **programming button** 22 again within 10 seconds to save the new quantity to the pressed **cup extraction button** 26 27.

## ▲ STORAGE

Store the appliance in the original packaging in a dry and enclosed space.

### NOTICE

**Risk of product damage.** Exposure to hot or cold temperatures may cause damage to the internal components of the appliance.

- Do not store the appliance at temperatures below 32 °F or above 131 °F.

## ▲ DAILY MAINTENANCE

We recommend carrying out the following maintenance procedures daily (before preparing the first cup of coffee):

1. Place a container underneath the **brewing head** 4.
2. Press one of the **cup extraction buttons** 26 27 to rinse the **brewing head** 4.
3. Dry the **brewing head** 4 with a cloth.
4. Rinse the **portafilter** 21 and the used **filters** 19 20 with tap water.
5. Dry the **portafilter** 21 and the used **filters** 19 20 with a cloth.
6. Check if the red floater of the **drip tray** 6 is visible through the grid.
7. If so, clean the **drip tray** 6 (section *Weekly maintenance*).

- i Repeat this procedure every time you brew a coffee to improve the quality of your coffee.

## ▲ WEEKLY MAINTENANCE

We recommend carrying out the following maintenance procedures once a week:

1. Empty the **drip tray** 6.
2. Clean the **drip tray** 6 with water and a mild detergent.
3. Set the **grind size selector** 24 to *COARSE*.
4. Check if the hopper gate at the back of the **bean container** 1 is open.
5. Place a container under the **portafilter holder** 3.
6. Press the **grind time knob** 31 to switch on the grinder and remove excess coffee.
7. After a few seconds, press the **grind time knob** 31 again to switch off the grinder.
8. Set the **grind size selector** 24 back to the desired position.

## ▲ MONTHLY MAINTENANCE

We recommend cleaning the appliance every month. To clean the appliance:

1. Plug in and switch on the appliance.
2. Set the **grind size selector** 24 to *COARSE*.
3. Close the hopper gate at the back of the **bean container** 1.
4. Place a container under the **portafilter holder** 3.
5. Press the **grind time knob** 31 to switch on the grinder and remove excess coffee.
6. After a few seconds, press the **grind time knob** 31 again to switch off the grinder.



E

7. Switch off the appliance and remove the **bean container** 1 (see image E).
8. Empty the **bean container** 1.





**F**

9. Reassemble the **bean container 1** (see image F).
10. Fill the **bean container 1** with GRINDZ™, which is available in selected countries.

**i** You can buy GRINDZ™ from your supplier or Solis (art. no. 993.08).

11. Open the hopper gate at the back of the **bean container 1**.
12. Place a container under the **portafilter holder 3**.
13. Switch on the appliance.
14. Press and hold the **grind time knob 31** to switch on the grinder.
15. When all GRINDZ™ has run through the appliance, release the **grind time knob 31** to switch off the grinder.
16. Close the hopper gate.
17. Switch off the appliance and remove the **bean container 1** (see image E).
18. Empty the **bean container 1**.
19. Rinse the **bean container 1** with warm water and a mild detergent.

20. Rinse the **bean container** ① with clean water.
21. Dry the **bean container** ① thoroughly.
22. Reassemble the grinder and the **bean container** ①. Make sure all parts lock in place.
23. Fill the **bean container** ① with coffee beans.
24. Open the hopper gate at the back of the **bean container** ①.
25. Switch on the appliance.
26. Press and hold the **grind time knob** ③① to switch on the grinder.
27. After 20 seconds, release the **grind time knob** ③① to switch off the grinder.
28. Set the **grind size selector** ②④ back to the desired position.
29. Switch off and unplug the appliance.

ⓘ Make sure the portafilter is not hot when removing the spout.


30. Unscrew the spout of the **portafilter** ②①.
31. Soak the following parts in warm water and a mild detergent:
  - Portafilter ②① (only the metal parts)
  - Cup filters ①⑨ ②⑩
  - Spout
32. Unscrew the steaming nozzle from the **steaming wand** ⑤.

ⓘ If the nozzle opening is blocked, you can use the pin on the cleaning tablet holder to remove the blockage. If you cannot unblock the nozzle with the pin, rinse the nozzle with warm water and try again.

33. Rinse the nozzle in warm water.
34. Gently screw the nozzle back onto the **steaming wand** ⑤.
35. Clean the appliance and the **water tank** ⑧ with a soft and damp cloth.
36. Dry the appliance and the **water tank** ⑧.
37. Plug in and switch on the appliance.

## ▲ REPLACING THE WATER FILTER CARTRIDGE

Replace the water filter cartridge when the corresponding alarm is visible (see section *Alarms*).

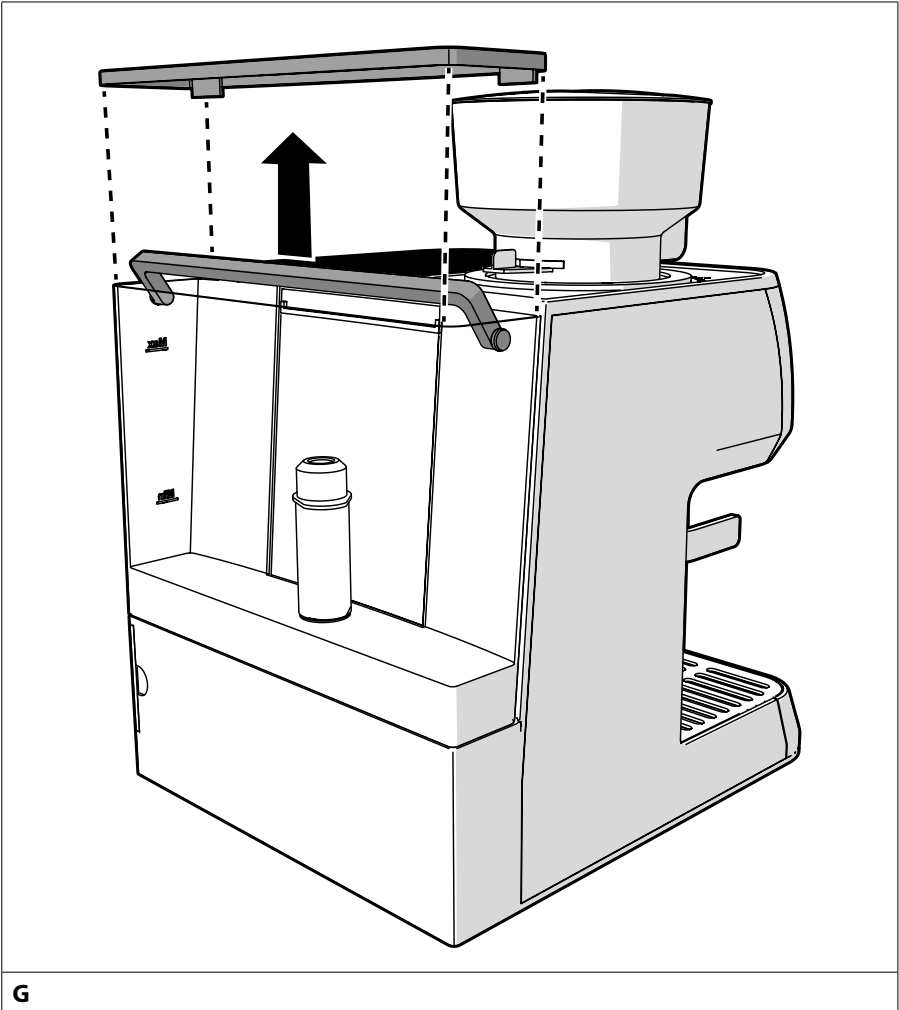

To replace the water filter cartridge:

1. Switch off and unplug the appliance.
2. Remove the **water tank 8** from the appliance (see image G).
3. Empty the **water tank 8** above a sink.
4. Remove the **water filter cartridge 9** from the **water tank 8**.

5. Hold the new **water filter cartridge 9** in a container with water.
- i** Use the INTENZA water filter cartridge (art. no. 700.78), which is available in selected countries.
6. Gently squeeze the **water filter cartridge 9** to remove air bubbles from the filter.
7. Rinse the **water tank 8** with water.
8. Insert the **water filter cartridge 9** into the bracket in the **water tank 8** with the selector facing downwards.
9. Fill the **water tank 8** with water up to the *MAX* marking.
10. Insert the **water tank 8** into the appliance.
11. Place a container (min. 0.14 gal) underneath the **brewing head 4**.
12. Plug in and switch on the appliance.
13. Press the **programming button 22**.
14. Press the **single cup extraction button 26** to activate the automatic rinsing cycle.

When the appliance beeps twice and the cup extraction buttons light up white, the appliance is ready for use.

## ▲ USING THE BREWING HEAD CLEANING CYCLE


Clean the appliance with a cleaning tablet when the corresponding alarm is displayed (see section *Alarms*).

For cleaning the brewing head, please use cleaning tablets which are suitable for espresso machines.


- i** For best results, we recommend SOLITABS (art. no. 993.02), which is available in selected countries.

To clean the appliance with a cleaning tablet:

1. Plug in and switch on the appliance.

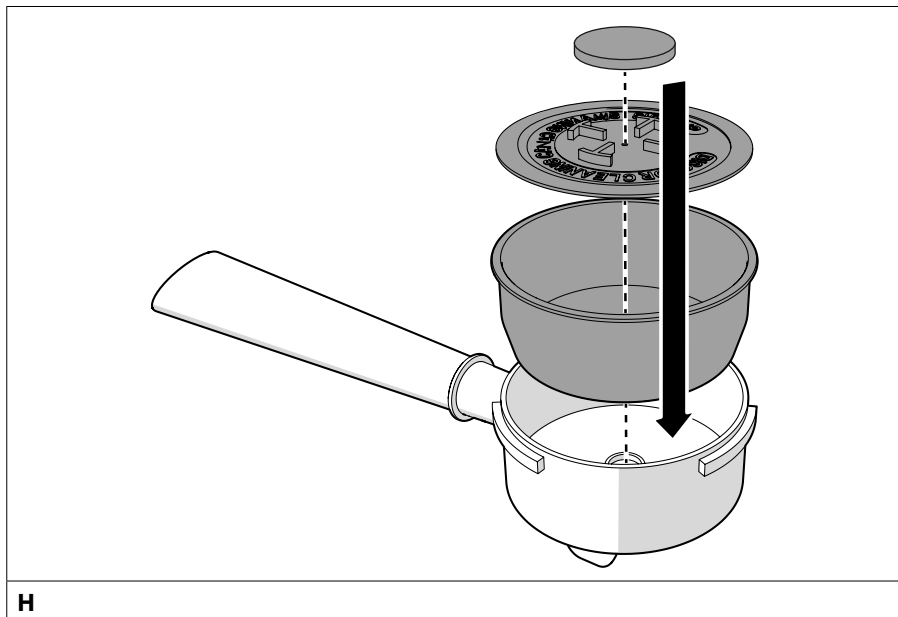

2. Place the **double cup filter** 19 into the **portafilter** 21.
3. Place the **rubber insert for cleaning** 17 into the **double cup filter** 19 (see image H) and put a SOLITABS cleaning tablet on top.

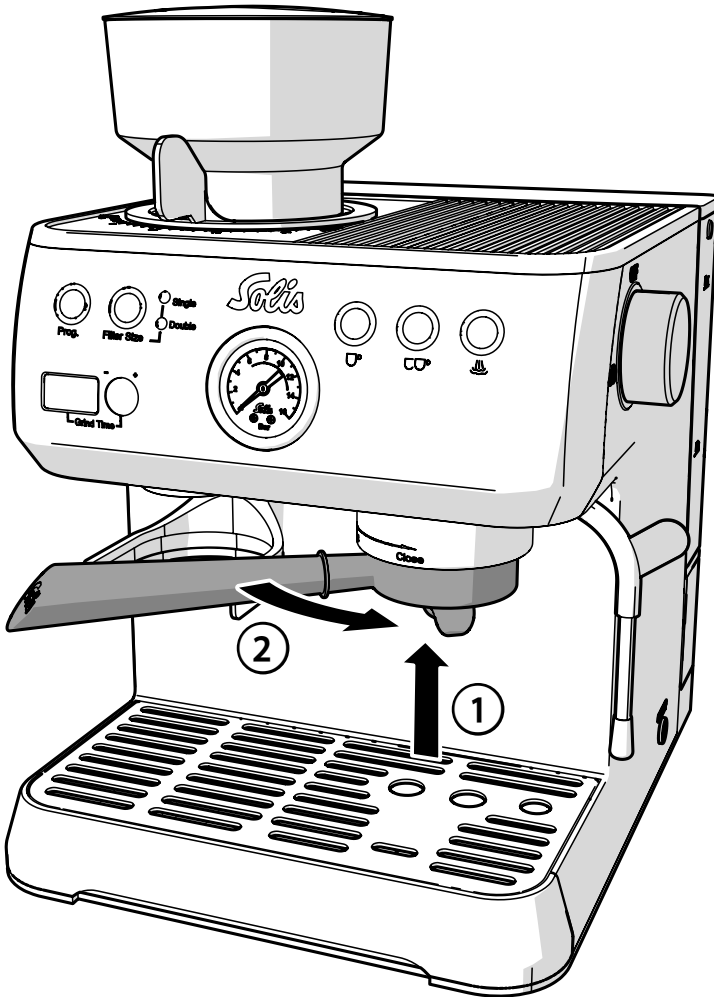

I

4. Insert and rotate the **portafilter 21** into the **brewing head 4** (see image I). Make sure the handle is aligned with the **CLOSE** marking.
5. Place a container underneath the **portafilter 21**.
6. Press the **programming button 22**.
7. Press the **double cup extraction button 27** to start the rinsing procedure.

The procedure has 8 cycles with pauses of 30 seconds. The cycle number and pause time are shown on the display.

8. Let the appliance cool down.
9. Remove the **portafilter** 21 from the **brewing head** 4.
10. Remove the **rubber insert for cleaning** 17 from the **portafilter** 21.
11. Before first use, clean the appliance as described in section *Daily maintenance*.

## ▲ DESCALING

Descale the appliance when the corresponding alarm is visible (see section *Alarms*).

For descaling the machine, please use a descaling agent which is suitable for espresso machines.

### **NOTICE**

**Risk of product damage.** The appliance must be descaled periodically to prevent permanent damage to the internal components.


- When the descaling alarm is displayed, descale the appliance immediately to avoid permanent damage to the appliance. Damage related to limescale is not covered by the warranty if the descaling procedure is not performed regularly as described in this section.

### **NOTICE**

**Risk of product damage.** Spilled descaling solution may cause damage to the surface of the appliance. Wipe off spilled descaling solution immediately.

To descale the appliance:

1. Switch off and unplug the appliance.
2. Empty the **drip tray 6** (see section *Weekly maintenance*).

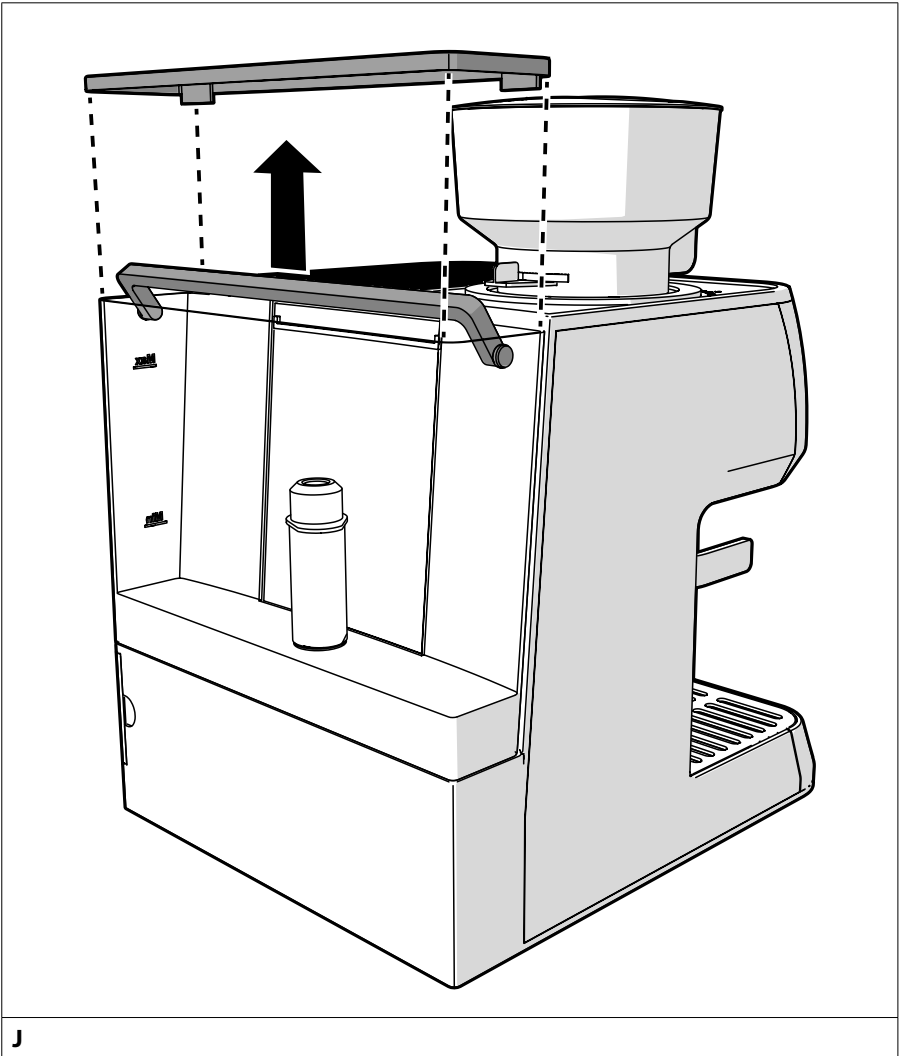

3. Remove the **water tank 8** from the appliance (see image J).
4. Empty the **water tank 8** above a sink.
5. Remove the **water filter cartridge 9** from the **water tank 8**.
6. Fill the **water tank 8** with descaling agent and water. The minimum level required for descaling is 0.27 gallon.



**i** For best results, we recommend Solipol special (art. no. 703.02), which is available in selected countries.

7. Insert the **water tank 8** into the appliance.
8. Place a large container (> 0.66 gal) underneath the **brewing head 4**.
9. Aim the **steaming wand 5** into the container.
10. Plug in and switch on the appliance.
11. Press the **programming button 22**.
12. Press the **steaming function button 28** to start the descaling process.

The descaling process takes 20 minutes. During the process:

- Rotate the **steaming knob 29** clockwise when the display shows *CL*.
- Rotate the **steaming knob 29** counterclockwise when the display shows *OP*.

**i** If the descaling procedure is interrupted (e.g. during a power loss) we recommend completing the procedure only after the interruption has been resolved. Rinse the appliance thoroughly when the process is finished.

When the first part of the process is finished the display indicates *H2O* and the appliance is ready for rinsing:

13. Remove the **water tank 8** from the appliance (see image J).
14. Empty the **water tank 8** above a sink.
15. Rinse the **water tank 8** multiple times under a tap.
16. Fill the **water tank 8** with cold tap water.
17. Insert the **water tank 8** into the appliance.
18. Empty the container and the **drip tray 6**.
19. Place back the container (step 6 through 7).
20. Press the **steaming function button 28** to start the rinsing process. During the process:
  - Rotate the **steaming knob 29** clockwise when the display shows *CL*.
  - Rotate the **steaming knob 29** counterclockwise when the display shows *OP*.

When the rinsing process is finished the appliance beeps twice.

21. Remove the **water tank 8** from the appliance (see image J).
22. Empty the **water tank 8** above a sink.
23. Rinse the **water tank 8** multiple times under a tap.
24. Insert the **water filter cartridge 9** into the bracket in the **water tank 8** with the selector facing downwards.
25. Fill the **water tank 8** with cold tap water.
26. Insert the **water tank 8** into the appliance.

When the cup extraction buttons light up white, the appliance is ready for use.

## ▲ CLEANING A BLOCKED GRINDER

To release a blocked grinder:

1. Clean the grinder (see section *Monthly maintenance*).

If the grinder is still blocked:

2. Switch off and unplug the appliance.
3. Close the hopper gate at the back of the **bean container** ①.
4. Remove the **bean container** ① (image E).
5. Press and hold the **grinder unlock button** ⑦ and rotate the **grind size selector** ⑳ to the *COARSE* position.
6. Remove the top part of the grinder.
7. Check if the coffee channel is obstructed.
8. Use the **cleaning brush** ⑮ to remove coffee inside the coffee channel.
9. Clean the grinder with a vacuum cleaner.
10. Place back the top part of the grinder. Rotate it clockwise until it locks in place.
11. Place back the bean container. Make sure all parts lock in place.

If the grinder is still not working, contact your supplier or Solis.

## ▲ RESETTING FUNCTIONS

To reset values of functions:

1. Press and hold the **programming button** ㉒ and the corresponding function button ㉓ ㉔ ㉕ for 5 seconds.
2. When resetting the filter size functions, first press the **filter size selection button** ㉓ to choose the filter size you want to reset.

If you want to reset all values and functions:

1. Press and hold the **programming button** ㉒ for 10 seconds. All buttons blink three times and the appliance beeps three times.

## ▲ TECHNICAL SPECIFICATIONS

<b>Model no.</b>	1019
<b>Voltage / frequency</b>	120 V~ / 60 Hz
<b>Output</b>	1290 - 1640 W
<b>Dimensions (W x D x H)</b>	11.8 x 15 x 15.7 in
<b>Weight</b>	21.2 lbs

Technical changes reserved.

## ▲ TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not dispense any coffee.	The water level in the water tank is too low.	Refill the water tank to the <i>MAX</i> indicator. Install the water tank correctly.
	The water filter cartridge is clogged.	Replace the water filter cartridge (see section <i>Replacing the water filter cartridge</i> ).
	The steaming function button blinks or continuously lights up white. The steaming function is activated.	Press one of the cup extraction buttons.
	The steaming knob is not in the <i>OFF</i> position.	Rotate the steaming knob clockwise.
	Coffee powder is too fine.	Increase the grind size.
The coffee is cold.	The cups are not preheated.	Preheat the cups on the cup tray or with the steaming wand.
	The appliance is not preheated.	Press one of the cup extraction buttons to preheat the appliance with water.
	Brewing temperature is too low.	Change the brewing temperature.

Problem	Possible cause	Solution
The coffee has a sour taste.	The coffee is expired.	Use fresh coffee beans and store the closed packaging in a cool and dark place.
The appliance does not dispense steam.	The coffee extraction buttons constantly light up white. The steaming function is not activated yet.	The steaming function button blinks. The steaming function is not ready yet.
	The steaming function button blinks. The steaming function is not ready yet.	Wait until the steaming function button constantly lights up white.
	The steaming function is used for more than 2 minutes.	Switch off the steaming function for at least 1 minute.
	The water level in the water tank is too low.	Refill the water tank to the <i>MAX</i> indicator. Install the water tank correctly.
	The steaming wand nozzle is clogged.	Clean the steaming wand nozzle (section <i>Monthly maintenance</i> ).
	The appliance is damaged	Contact Solis or a Solis authorized service center.
	The water filter cartridge is clogged.	Replace the water filter cartridge (see section <i>Replacing the water filter cartridge</i> ).

Problem	Possible cause	Solution
The appliance does not dispense hot water.	The steaming function button blinks or continuously lights up white. The steaming function is activated.	Press one of the cup extraction buttons.
	The cup extraction buttons blink. The hot water function is not ready yet.	Wait until the cup extraction buttons constantly light up white.
	The water level in the water tank is too low.	Refill the water tank to the <i>MAX</i> indicator. Install the water tank correctly.
	The steaming wand nozzle is clogged.	Clean the steaming wand nozzle (section <i>Monthly maintenance</i> ).
	The appliance is damaged	Contact Solis or a Solis authorized service center.
	The water filter cartridge is clogged.	Replace the water filter cartridge (see section <i>Replacing the water filter cartridge</i> ).
The steaming wand fails to steam the milk.	The used milk jug is too big or has an unsuitable shape.	Use another milk jug.
	The milk used has less than 3.3% milk protein.	Use milk with more than 3.3% milk protein.

Problem	Possible cause	Solution
Coffee runs out from the edges of the portafilter.	The portafilter is not attached properly.	Stop the brewing process by pressing the used cup extraction button again. Reinstall the portafilter.
	There is too much ground coffee in the portafilter.	Stop the brewing process by pressing the used cup extraction button again. Remove the portafilter. Use the appliance again with less ground coffee.
	Ground coffee sticks to the brewing head.	Let the appliance cool down. Clean the brewing head with a moist sponge or cloth.
	The holes in the single wall filter are clogged.	Clean the single wall filter with the cleaning tool.
	The coffee is ground too fine.	Change the grind size.
The grinder stops during the grinding process.	The grinder is blocked.	See section <i>Cleaning a blocked grinder</i> .
The appliance does not function.	The power connection is not working.	Make sure the power cable is connected to a working power source.
	The appliance is not switched on.	Make sure the appliance is switched on.
	The appliance is damaged.	Press any button. If the appliance doesn't switch on, the appliance is damaged. Contact Solis or a Solis authorized service center.

## ▲ ALARMS

- ⚠ It is possible that multiple alarm signals are displayed at the same time. When this occurs, fix all the alarms individually according to the description in this manual. When both cup extraction buttons light up white, the appliance is ready for use.

Alarm	Meaning	Solution
Display shows: <i>OP</i>	The appliance indicates that the steaming knob should be open during the descaling function.	Put the steam wand into a container and rotate the steaming knob anticlockwise.
Display shows: <i>CL</i>	The appliance indicates that the steaming knob should be closed during the descaling function.	Put the steam wand into a container and rotate the steaming knob clockwise.
Display shows: <i>H2O</i>	The water level in the water tank is too low.	Refill the water tank.
Display shows: <i>S/M/H</i>	S, M, and H show the selected water hardness. (s: soft, m: medium, h: hard).	Use a test strip to measure the water hardness and set the appliance accordingly.
Steaming function button flashes red	The appliance needs to be descaled.	See section <i>Descaling</i> .
Double cup extraction button flashes white and red	The appliance needs to be cleaned with a cleaning tablet.	See section <i>Using the brewing head cleaning cycle</i> .
Single cup extraction button flashes white and red	The water filter cartridge needs to be replaced,	See section <i>Replacing the water filter cartridge</i> .
Both cup extraction buttons are flashing and an alarm is audible	Water tank is empty.	Fill the water tank.
	The coffee is ground too fine.	Change the grind size.

## ▲ HELPLINE

This item stands out due to its long-life cycle and reliability. Despite this though, if a malfunction ever occurs, simply give us a call. Often a breakdown can be easily and quickly remedied with the right tip or technique without having to straight away send off the device for repair. We will give you all the advice and practical support you require.

Live chat on: [www.seattlecoffeegear.com](http://www.seattlecoffeegear.com)

E-Mail: [support@seattlecoffeegear.com](mailto:support@seattlecoffeegear.com)

Phone: 866-372-4734

Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

SINCE 1908

*Solis*

## **Solis of Switzerland Ltd**

Solis-House • CH-8152 Glattbrugg-Zurich • Switzerland  
[www.solis.ch](http://www.solis.ch) • [www.solis.com](http://www.solis.com)

**please visit us at**

**[www.solis.com](http://www.solis.com)**