


Pasquini G4 High Limit Reset Instructions

The Pasquini G4 has a thermal block in the brew head, which may cause the machine to feel warm to the touch, but produce cold water if the high limit switch has been tripped.

You will need:
~a 3 mm Allen key

****Be certain that the machine is off, unplugged, and cold when starting this procedure.**

1. Remove water reservoir lid and remove water reservoir. The hoses will dangle.
2. The high limit reset is on the bottom of the machine-you will need to turn the machine on its side.
3. There is a black panel underneath-you will need the Allen key to remove all four bolts from around the black panel.
4. Underneath, you will find the bottom of the boiler, with the high limit switch slightly right of center (see the photo below)

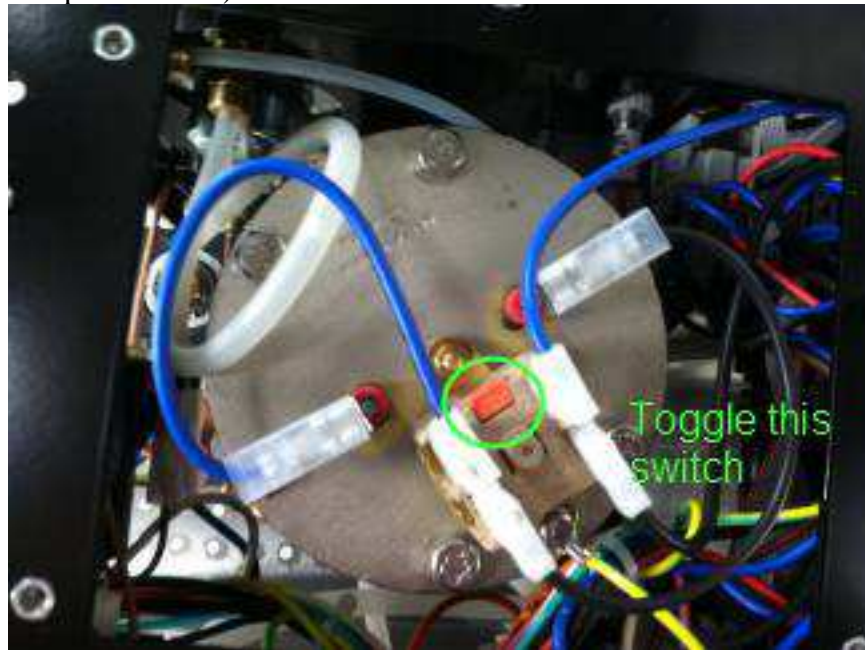

5. Toggle it a few times-it may or may not make a clicking noise, then right the machine and re-insert the water reservoir and the hoses.
6. Turn the machine on, and give it 15 minutes to heat. If it does, and hot water of the correct temperature runs through the machine, turn it off, allow it to cool, and reassemble. You may need to perform this procedure a few times to correct the issue. If not, please call Technical Support.