

Replacing the Pressure Stat on your Expobar Machine

Introduction

To replace the pressure stat on your Expobar, you will need to remove the housing and locate the stat. The installation is a 3-step process and will only require a few tools. Housing removal has not been included in this instructional as it may vary on different machines.

Things You Will Need:

1x 18mm wrench
1x 16mm wrench
Marker


Step 1:

Once you have the housing removed from the machine, locate the pressure stat. The picture below will illustrate what the item looks like, and how you will be removing it. Put your 16mm wrench on the nut of the pressure stat itself, and then your 18mm wrench on the nut of the hardline. I would recommend using the 16mm to brace the pressure stat, and then turn the 18mm to undo the nut on the hardline. The item highlighted in the picture is the pressure stat. Yours may have some heat wrap around it, you will need to cut this off.



Step 2:

Once the nut is undone, you now need to remove your leads as highlighted in the picture above. Depending on your machine, you may have only 2 wires. In this case, the machine we're working on has 3. I would recommend labeling the wires accordingly so you know which lead goes back where.

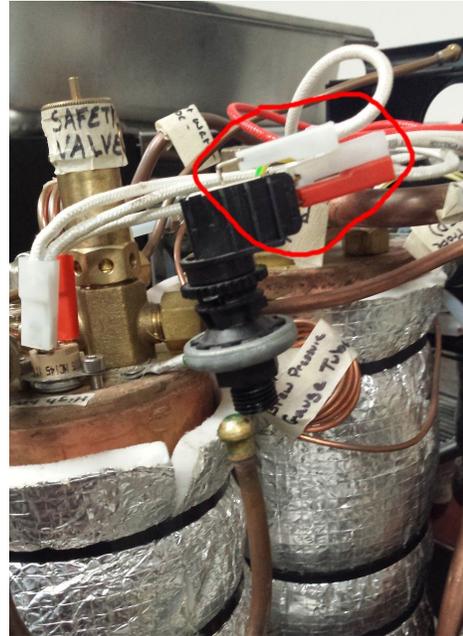

Step 3:

Once you've got your leads labeled, get your new pressure stat screwed back onto the nut on the hardline, and reattach your electrical leads in their corresponding places.

